


LEMON CLOCK

INSTRUCTION

1. Connect the red wire on the LCD watch to a copper plate and the black wire to a zinc plate. Secure the wires in place with adhesive tape. Get another copper plate and zinc plate and connect them with the connection wire using adhesive tape.
2. Insert the copper plates and zinc plates into the lemon halves to activate the LCD watch movement as shown in the diagram. You will see your watch start blinking.

HOW DOES IT WORK?

The copper plates act like the positive electrodes of a battery. They are plated with a metal which is less reactive than zinc. When the copper plates and zinc plates are inserted into the lemon, a chemical reaction takes place. Electrons (extremely small particles with negative charge) move from the zinc plates to the copper plates to form a current, thus activating the LCD watch. The lemon juice helps to conduct electricity. You can replace the lemon with a potato, a grapefruit or use soft drinks and see what effect this has.

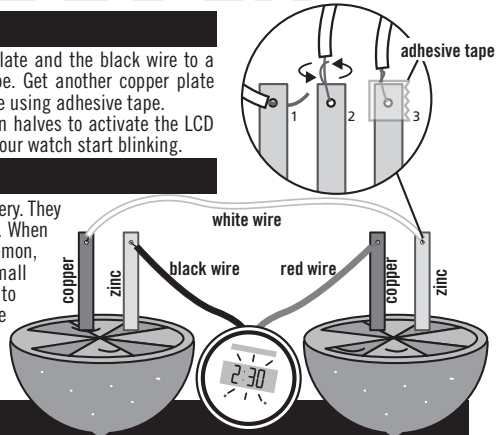

SETTING LCD WATCH

1. Press A twice and the display will show the 'set month' mode. Press B to adjust to the right month, and then press A to confirm.
2. The 'set day' mode will be displayed. Press B to adjust to the the right day, and then press A to confirm.
3. The 'set hour' mode will be displayed. Press B to adjust to the right hour, then press A to confirm.
4. The 'set minute' mode will be displayed. Press B to adjust to the right minute, then press A to confirm. Now the normal time will be displayed. You should see the two dots flashing on the display between the hours and minutes.



VIEWING THE TIME

- By default, the clock display shows the current time.
- To view the date, press B once. The clock display will resume showing the current time after 2 seconds.
- To view the seconds, press B twice. Press B again to return to the hours and minutes normal time display.
- To view the time and date alternately, press A once. Press A again to go back to the hours and minutes display.
- Press A five times to skip all set clock modes.

FOR AGES OVER 5. NOT FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS. ADULT GUIDANCE IS RECOMMENDED. READ THE INSTRUCTIONS BEFORE USE. FOLLOW THEM AND KEEP THEM AS REFERENCE. MADE IN CHINA.

F. AVERTISSEMENT: AVERTISSEMENT: CONVIENT À PARTIR DE L'ÂGE DE 5 ANS. NE CONVIENT PAS AUX ENFANTS DE MOINS DE 3 ANS À CAUSE DE PETITES PIÈCES DÉTACHABLES PRÉSENTANT UN RISQUE D'INGESTION. LISEZ LES INSTRUCTIONS AVANT L'UTILISATION. FABRIQUÉ EN CHINE. CONSERVEZ TOUTES LES INFORMATIONS ET L'ADRESSE.

D. WAARSCHUWING: WARNHINWEIS: GEEIGNET FÜR KINDER AB 5 JAHREN. NICHT FÜR KINDER UNTER 3 JAHREN GEEIGNET, WEGEN ABLÖSBARER UND VERSCHLÜCKBARER KLEINTEILE. LESEN SIE DIE ANLEITUNG VOR GEBRAUCH. HERGESTELLT IN CHINA. BITTE ALLE INFORMATIONEN UND ADRESSE AUFBEWAHREN.

NL. WAARSCHUWING: WAARSCHUWING: VOOR KINDEREN VANAF 5 JAAR. NIET GESCHIKT VOOR KINDEREN JONGER DAN 3 JAAR WEGENS KLEINE ONDERDELEN DIE LOSGEMAAKT OF INGESLIKT KUNNEN WORDEN. LEES DE GEBRUIKSAANWIJZING VOOR HET GEBRUIK. GEFABRICIEERD IN CHINA. ALLE INFORMATIE EN ADRES BEWAAREN.

I. ATTENZIONE: DESTINATO A BAMBINI DI ETÀ SUPERIORE AGLI 5 ANNI. NON ADATTO PER BAMBINI AL DI SOTTO DEI 3 ANNI. A CAUSA DI PICCOLE PARTI CHE POSSONO CAUSARE SOFFOCAMENTO SE UTILIZZATE IN MODO NON APPROPRIATO. LEGGERE LE ISTRUZIONI PRIMA DELL'USO. FABBRICATO IN CINA. CONSERVARE LE ISTRUZIONI PER CONSULTAZIONE FUTURA.

S. ADVERTENCIA: PARA NIÑOS MAYORES DE 5 AÑOS; NO SE RECOMIENDA PARA NIÑOS MENORES DE 3 AÑOS, YA QUE LAS PARTES PEQUEÑAS PUEDEN CAUSAR ASFIXIA SI SE USAN INDEBIDAMENTE. LEA LAS INSTRUCCIONES ANTES DE USAR EL JUEGO. HECHO EN CHINA. CONSERVE ESTA INFORMACIÓN HASTA EL FIN DE SU USO.

J. 警告: 対象年齢5歳以上。3歳以下のお子様には決して与えないでください。小さな部品がありますので、誤って飲み込まないようにご注意ください。窒息などの危険があります。使用前に説明書を読みましょう。中国製。説明書は、大切に保管してください。

KEEP THE INFORMATION FOR FURTHER REFERENCE. DISTRIBUTED BY: AUSTRALIA - JOHNCO PRODUCTIONS PTY LTD. WEB SITE: www.johncoproductions.com. EMAIL: info@johncoproductions.com. TEL: 61-2-94525819. CANADA - PLAYWELL ENTERPRISES LIMITED. EMAIL: pelca@rogers.com. TEL: 1-416-439-0044. MALAYSIA - ELITE TOYS (M) SDN BHD. EMAIL: info@elite-toys.com. TEL: 603-9171 8830. NEW ZEALAND - LEISURE DYNAMICS (NZ) LTD. EMAIL: idsales@hollison.co.nz. TEL: 64-9-8287159. SINGAPORE - LANCASHIRE MARKETING PTE LTD. EMAIL: info@Lancashire-Toys.com.sg. TEL: 65-6743 1184. UNITED KINGDOM - GREAT GIZMOS LIMITED, BARLOW HOUSE, CROMPTON FIELDS, CRAWLEY, RH10 9QB, UK. WEB SITE: www.greatgizmos.co.uk. EMAIL: enquiries@greatgizmos.co.uk. TEL: 44-1293-543221. UNITED STATES - TOY INVESTMENTS INC. DBA TOYSMITH, 3101 WEST VALLEY HWY EAST, SUMNER, WA 98390. USA WEBSITE: www.toysmith.com. EMAIL: info@toysmith.com. TEL: 800-356-0474.

©2011 4M INDUSTRIAL DEVELOPMENT LIMITED. ALL RIGHTS RESERVED. KIDZ LABS® IS A REGISTERED OF 4M INDUSTRIAL DEVELOPMENT LIMITED. 2104, SHUI ON CENTRE, HARBOUR RD, HONG KONG. WEB SITE: WWW.4M-IND.COM. EMAIL: INFO@ESK64M-IND.COM

